


Denton Digital Building Intelligence PoE Lighting Install Kit

DENT-LK-C2-A (2x 2X2 CEILING TROFFERS)

PACKING LIST		
QTY	SKU OR ID	DETAILS
1	DENT-LINC-CC	LED CONTROL DRIVER
1	GPOE-1AB-56V60W	PoE 60 WATT INJECTOR WITH Y CABLE
1	DENT-WS-S4	4 BUTTON CONTROL SWITCH
2	LTG-FP-2-2-4K	2X2 CEILING TROFFER (4000K)

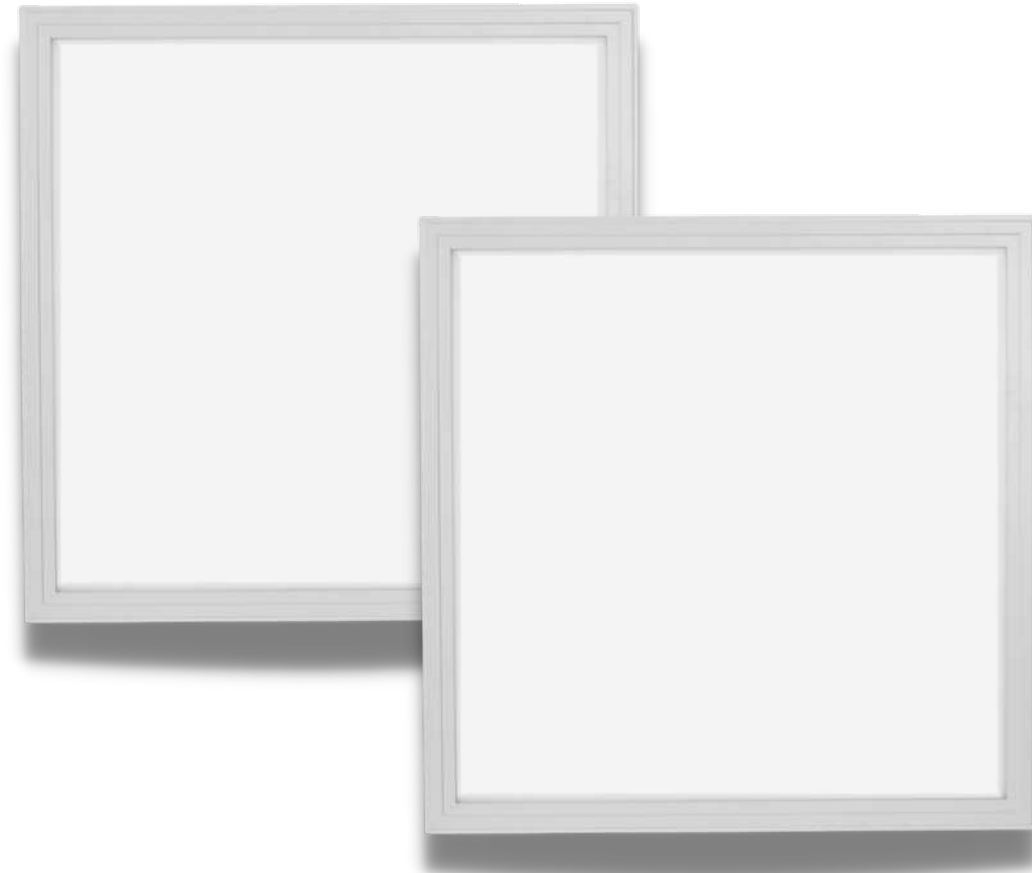

Denton Contractor Lighting Kit

3616 Far West Blvd
Suite 117-294
Austin TX 78731

DATE:
June 28, 2022

TITLE:
DENT-LK-C2-A
Bill of Materials


DRAWING NUMBER:

00

General Layout

INSTRUCTIONS:

- Locate where the Power Sourcing Equipment (PSE) will be located within 330 ft (100m) of the lighting controller location
- Locate and install the DENT-LINC within 100 ft of the final location of the lights and controller. You can install it in the ceiling or in a centralized control room
- Run wiring and install light fixtures and controller

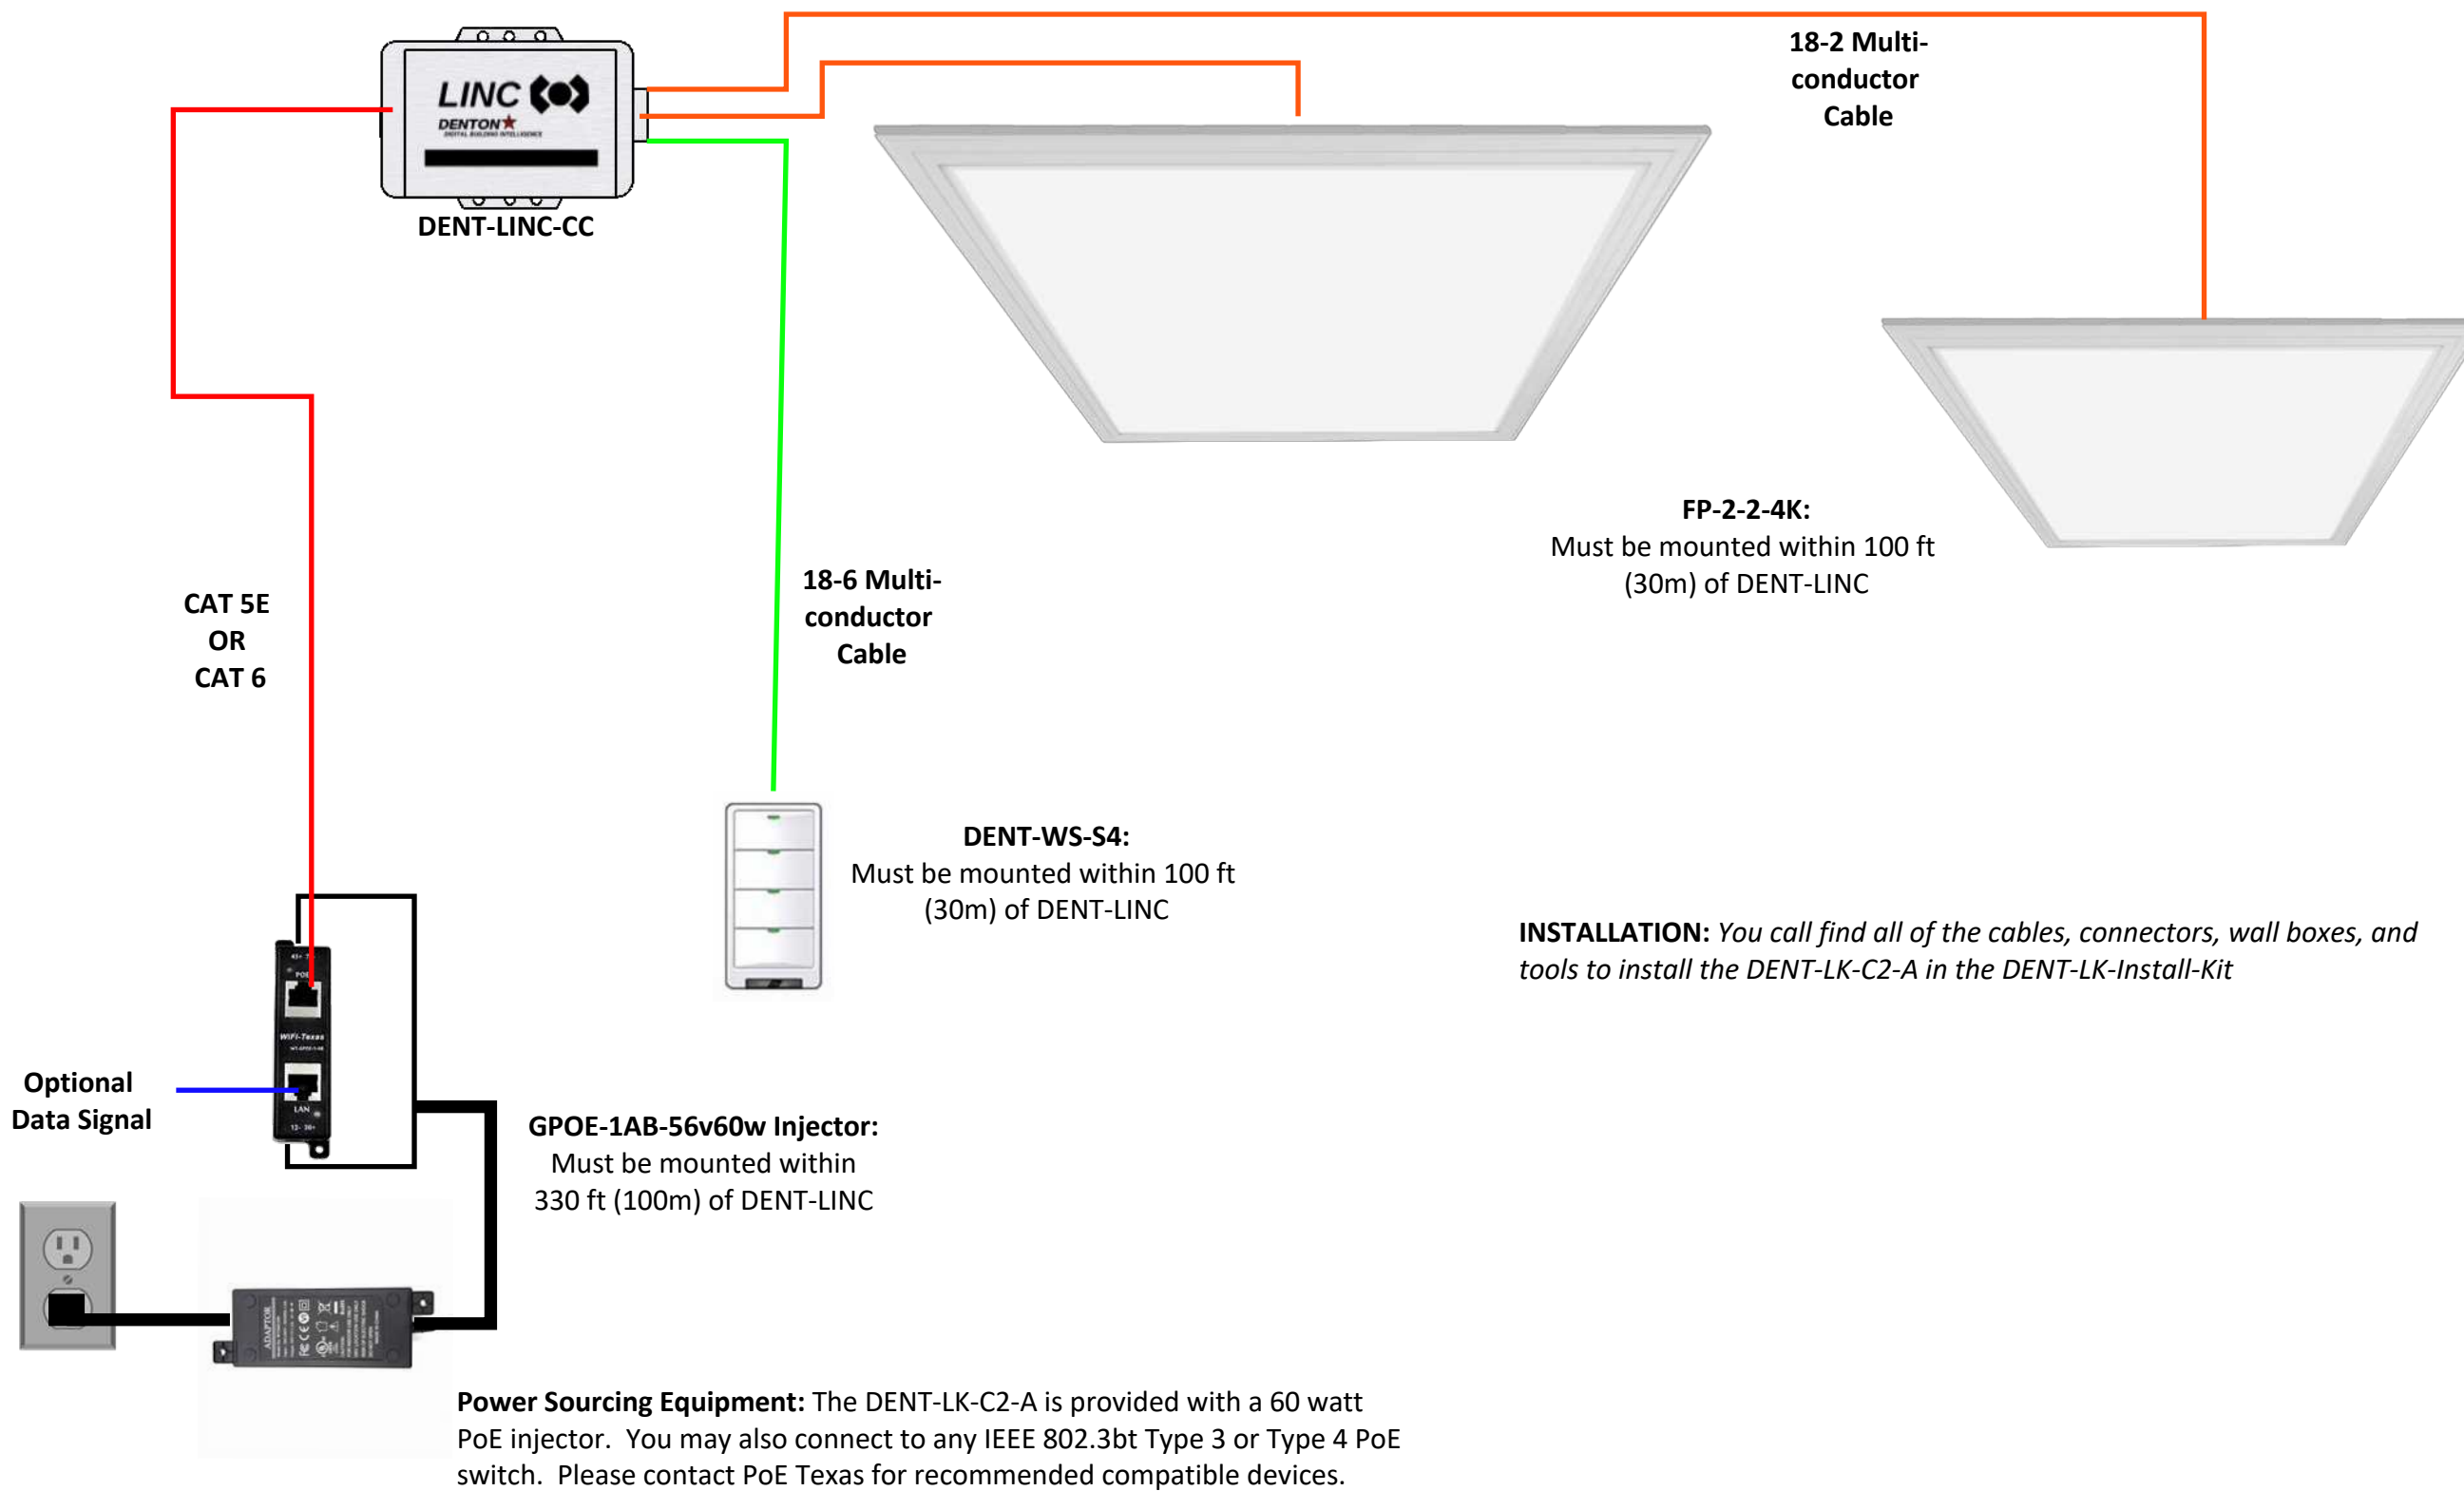

INSTALLATION: You call find all of the cables, connectors, wall boxes, and tools to install the DENT-LK-C2-A in the DENT-LK-Install-Kit

Denton Contractor Lighting Kit

3616 Far West Blvd
Suite 117-294
Austin TX 78731

DATE:
June 28, 2022

TITLE:
DENT-LK-C2-A
Layout



DRAWING NUMBER:

01


DENT-LK-C2-A



WAGO 221 LEVER NUTS SUGGESTED
Select connectors based on space and availability

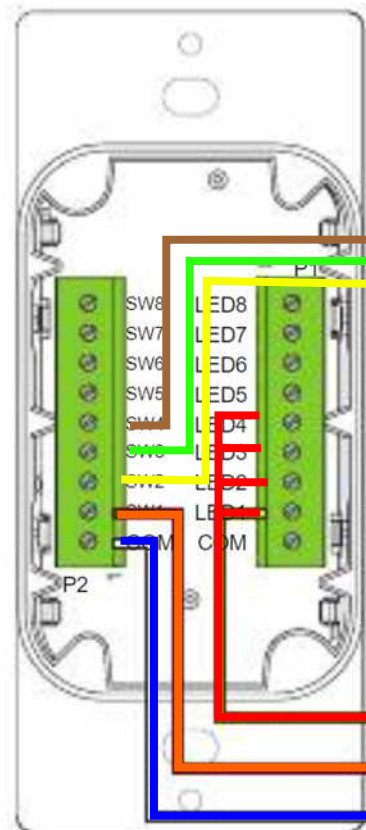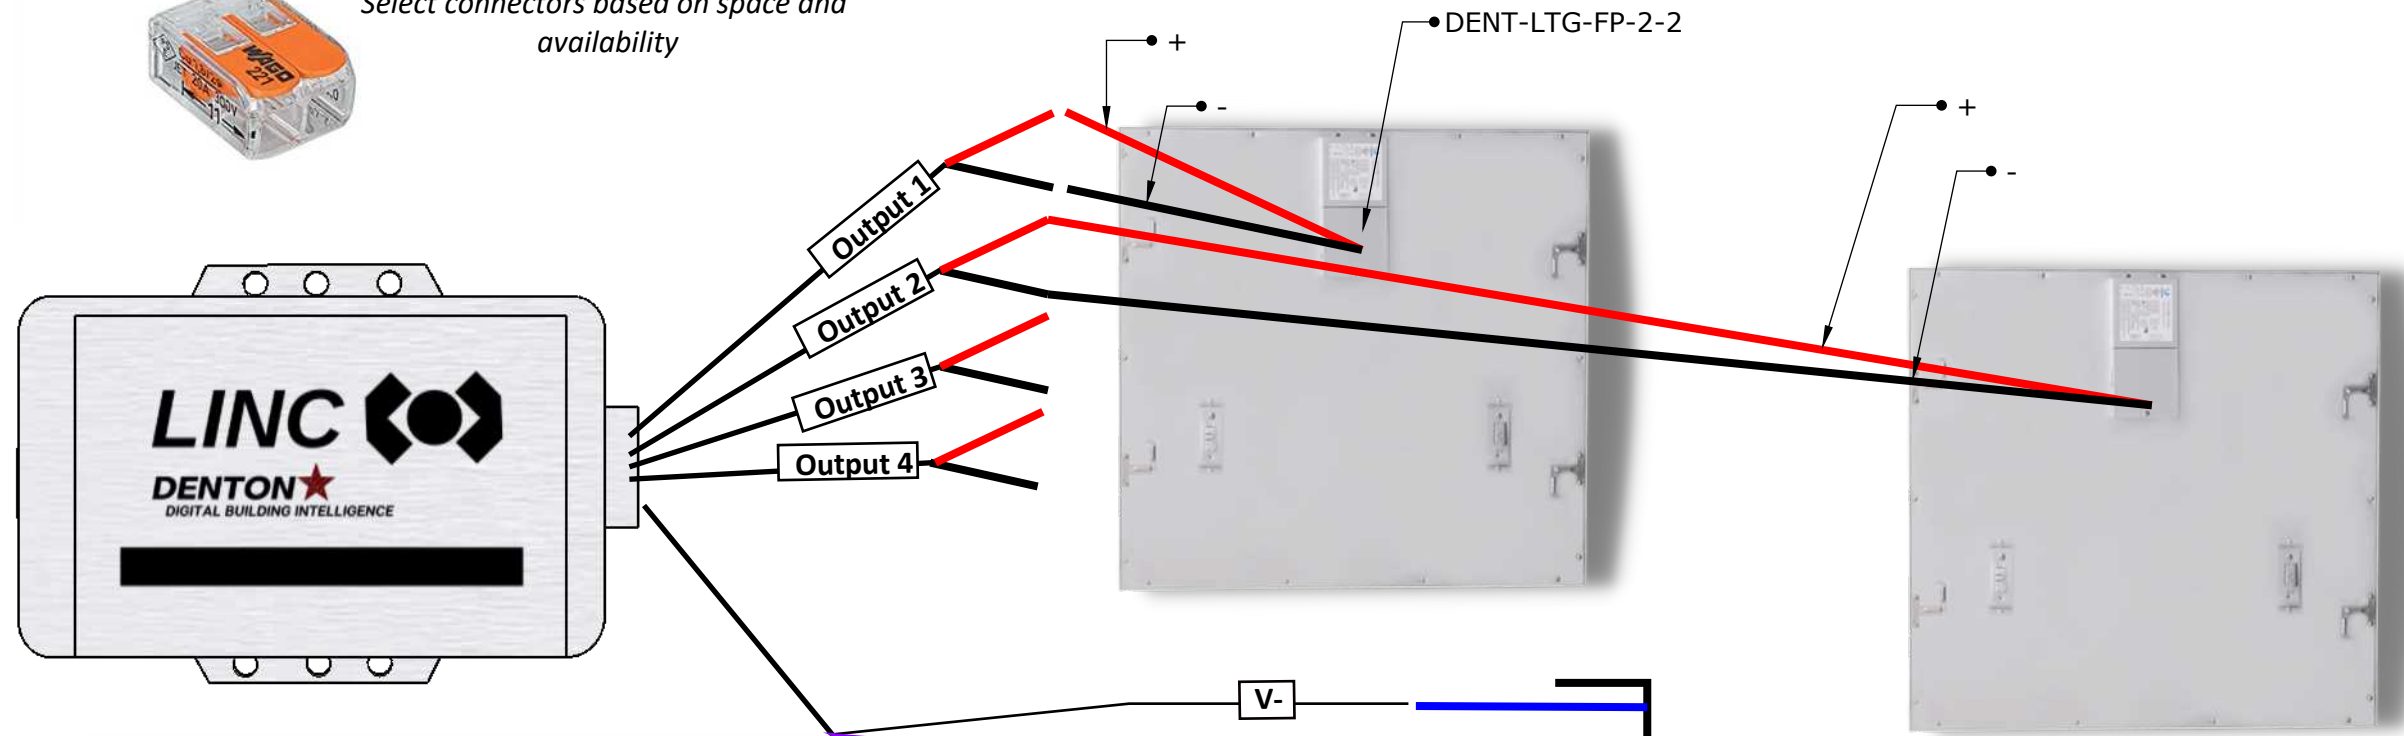

- S4 -> Brown -> Input 4
- S3 -> Green -> Input 3
- S2 -> Yellow -> Input 2
- LED 1-4 -> Red -> +24 VDC
- S1 -> Orange -> Input 1
- C -> Blue -> V-

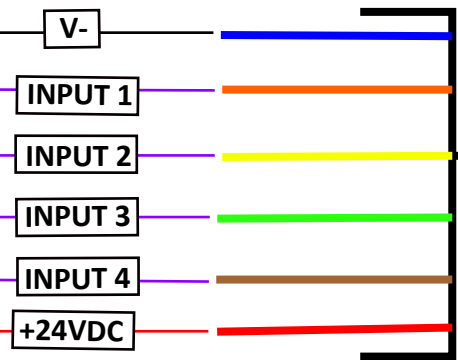

MULTI-CONDUCTOR
COLORS MAY VARY



- Switch 1 - S1 - Input 1
Toggle Lights ON/OFF
- Switch 2 - S2 - Input 2
Brighten/Dim Fixture 1
- Switch 3 - S3 - Input 3
Brighten/Dim Fixture 2
- Switch 4 - S4 - Input 4
Brighten/Dim Both Fixtures

**Denton Contractor
Lighting Kit**

3616 Far West Blvd
Suite 117-294
Austin TX 78731

DATE:
June 28, 2022

TITLE:
DENT-LK-C2-A
Wiring

DRAWING NUMBER: